

# Projectors supported by JED T460R projector controller.

## V 4.19 Total count 2053

Acer: 7755C  
 Acer: PD523 \*\* May need proj  
 firmware update \* No parallel

Acer: P1165  
 Acer: P1265  
 Acer: P5260  
 Acer: P5270

Acer: P5280  
 Acer: P5370  
 Acer: PD723  
 Acer: PD725

---

ASK Proxima C20  
 ASK Proxima C60  
 ASK Proxima C85  
 ASK Proxima C90  
 ASK Proxima C95  
 ASK Proxima C100  
 ASK Proxima C105  
 ASK Proxima C170

---

ASK Proxima C175  
 ASK Proxima C180  
 ASK Proxima C185  
 ASK Proxima C200  
 ASK Proxima C310  
 ASK Proxima C410  
 ASK Proxima C420  
 ASK Proxima C440

---

ASK Proxima C445  
 ASK Proxima C447  
 ASK Proxima C448  
 ASK Proxima C450  
 ASK Proxima C460  
 ASK Proxima C500

---

Barco: BD2100  
 Barco: BD3000  
 Barco: BD3100  
 Barco: BD3200  
 Barco: BD3300

---

Barco: BD5000  
 Barco: BD5100  
 Barco: BD6300  
 Barco: BD8000  
 Barco: BD8100

---

Barco: BG8200  
 Barco: BG9200

BARCO: CLM

---

BenQ LCD: RP550+  
 BenQ LCD: RP551+  
 BenQ LCD: RP650+  
 BenQ LCD: RP651+

---

BenQ LCD: RP700+  
 BenQ LCD: RP840G  
 BenQ LCD: SL490  
 Generic 1

---

Alt code set:  
 Generic 2 38400 baud  
 Generic 3 9600 baud

---

BenQ: MP512/ST  
 BenQ: MP513/ST  
 BenQ: MP515/ST  
 BenQ: MP522/c/ST  
 BenQ: MP525/P/ST  
 BenQ: MP526  
 BenQ: MP575  
 BenQ: MP576  
 BenQ: MP623  
 BenQ: MP624  
 BenQ: MP626  
 BenQ: MP670  
 BenQ: MP724  
 BenQ: MP727  
 BenQ: MP735  
 BenQ: MP772/ST  
 BenQ: MP776/ST  
 BenQ: MP777  
 BenQ: MP780ST

---

BenQ: MW811ST  
  
 BenQ: MX615  
 BenQ: MX660P  
 BenQ: MX710  
 BenQ: MX711  
 BenQ: MX712UST  
 BenQ: MX713ST  
 BenQ: MX716  
 BenQ: MX717  
 BenQ: MX750  
 BenQ: MX760  
 BenQ: MX761  
 BenQ: MX763  
 BenQ: MX764  
 BenQ: MX762ST  
 BenQ: MX810ST  
 BenQ: MX812ST  
 BenQ: MX880UST

---

BenQ: PB8140  
 BenQ: PB8240  
 BenQ: PB8250  
 BenQ: PB8253  
 BenQ: PB8260  
 BenQ: PB8263

BenQ: SH960

BenQ: SP830  
 BenQ: SP831  
 BenQ: SP840  
 BenQ: SP920

BenQ: W600  
 BenQ: W1060  
 BenQ: W1070  
 BenQ: W7000+

---

BenQ: MS614  
  
 BenQ: MW714ST

---

BenQ: PB7100  
 BenQ: PB7200  
 BenQ: PB7220

---

\* No parallel operation allowed  
 as most BenQ proj. need "Reply"  
 mode.

---

Boxlight: MP-60e

---

Boxlight: MP-63e

---

Canon: LV8235UST

---

Casio: XJ-M series supported  
 Casio: XJ-H series supported

---

(Casio XJ-A series, same codes,  
 currently untested.)

**Christie Generic E,G:**

E series:

DHD675-E,  
DWU675-E,  
DHD775-E,  
DWU775-E,

G series:

DHD550-G,  
DWU550-G,  
DWX600-G,  
DHD600-G,  
DWU600-G

Christie: DS30

Christie: Plus 25  
Christie: DS30  
Christie: LS+58  
Christie: LU77  
Christie: LW25  
Christie: LW40  
Christie: LW300  
Christie: LW600  
Christie: LX20  
Christie: LX25  
Christie: LX26  
Christie: LX32  
Christie: LX33  
Christie: LX35  
Christie: LX35  
Christie: LX37  
Christie: LX40Christie: LX41  
Christie: LX45  
Christie: LX50  
Christie: LX55  
Christie: LX65  
Christie: LX66  
Christie: LX100  
Christie: LX120  
Christie: LX380  
Christie: LX450  
Christie: LX650  
Christie: LX900  
Christie: MAT. 1500  
Christie: VIVID WHITE  
Christie: VIVID BLUE

---

CommBox\_LCD\_RS232\_V4

---

Dell: 1200MP  
Dell: 1201MP  
Dell: 1209S  
Dell: 1409X  
Dell: 1510X  
Dell: 1609WX  
Dell: 1610HDDell: 1800MP  
Dell: 2400MP  
Dell: 4100MP  
Dell: 4210X  
Dell: 4220  
Dell: 4310WX  
Dell: 4320Dell: 4610X  
Dell: 5100MP  
Dell: 7609WU  
Dell: S300/W/WI  
Dell: S500/W/WI  
(Dell: 2300MP deleted)Eiki: EIP-200  
Eiki: EIP-250  
Eiki: EIP-1000  
Eiki: EIP-1500  
Eiki: EIP-1600  
Eiki: XIP-2000  
Eiki: EIP-2500  
Eiki: EIP-2600  
Eiki: EIP-3000  
Eiki: EIP-3500  
Eiki: EIP-4200  
Eiki: EIP-4500  
Eiki: EIP-5000  
Eiki: EIP-HDT20  
Eiki: EIP-HDT30  
Eiki: EIP-S200  
Eiki: EIP-SXG20  
Eiki: EIP-X200  
Eiki: EIP-X350Eiki: LC-SB10  
Eiki: LC-SB20  
Eiki: LC-SB21  
Eiki: LC-SB22  
  
Eiki: LC-SE10  
  
Eiki: LC-SD10  
Eiki: LC-SD12  
Eiki: LC-SD15  
  
Eiki: LC-SM1  
Eiki: LC-SM2  
Eiki: LC-SM3  
Eiki: LC-SM4  
  
Eiki: LC-SVGA860  
Eiki: LC-SVGA870Eiki: LC-W5  
Eiki: LC-WB42N  
Eiki: LC-WB100  
Eiki: LC-WB200  
Eiki: LC-WGC500  
Eiki: LC-WIP3000  
  
Eiki: LC-WS250  
  
Eiki: LC-WSP3000  
  
Eiki: LC-WUL100  
  
Eiki: LC-WX5000/L  
Eiki: LC-WXL200Eiki: LC-980  
Eiki: LC-982Eiki: LC-SX1U  
Eiki: LC-SX2U  
Eiki: LC-SX3U  
Eiki: LC-SX4XL  
Eiki: LC-SX6Eiki: LC-XL100  
Eiki: LC-XL200Eiki: LC-HDT10  
Eiki: LC-HDT700  
Eiki: LC-HDT1000  
Eiki: LC-HDT2000  
Eiki: LC-NB1Eiki: LC-SXG400L  
Eiki: LC-UXT1

Eiki: LC-X1U

Eiki: LC-NB2  
Eiki: LC-NB3  
Eiki: LC-NB4Eiki: LC-UXT3  
Eiki: LC-VC1Eiki: LC-X2U  
Eiki: LC-X3  
Eiki: LC-X4  
Eiki: LC-X5  
Eiki: LC-X6  
Eiki: LC-X7  
Eiki: LC-X8  
Eiki: LC-X50  
Eiki: LC-X60  
Eiki: LC-X70

Eiki: LC-X71  
Eiki: LC-X80  
Eiki: LC-X85  
Eiki: LC-X983  
Eiki: LC-X984  
Eiki: LC-X985  
Eiki: LC-X986  
Eiki: LC-X990  
Eiki: LC-X999  
Eiki: LC-X1000  
Eiki: LC-X1100

Eiki: LC-XA20

Eiki: LC-XB10  
Eiki: LC-XB20  
Eiki: LC-XB21  
Eiki: LC-XB22  
Eiki: LC-XB23  
Eiki: LC-XB24  
Eiki: LC-XB25  
Eiki: LC-XB27  
Eiki: LC-XB27Alt  
Eiki: LC-XB28  
Eiki: LC-XB29  
Eiki: LC-XB30  
Eiki: LC-XB31  
Eiki: LC-XB33  
Eiki: LC-XB33N  
Eiki: LC-XB33NAlt

Eiki: LC-XB40  
Eiki: LC-XB41  
Eiki: LC-XB42  
Eiki: LC-XB42N  
Eiki: LC-XB42NAlt  
Eiki: LC-XB43  
Eiki: LC-XB100  
Eiki: LC-XB200

Eiki: LC-XBL20  
Eiki: LC-XBL21/W  
Eiki: LC-XBL25  
Eiki: LC-XBL26/W

Eiki: LC-XBM21/W  
Eiki: LC-XBM26/W  
Eiki: LC-XBM31/W

Eiki: LC-XC1

Eiki: LC-XD25  
Eiki: LC-XDP3500

Eiki: LC-XE10

Eiki: LC-XG100  
Eiki: LC-XG110  
Eiki: LC-XG200  
Eiki: LC-XG210  
Eiki: LC-XG250

Eiki: LC-XG300  
Eiki: LC-XG400

Eiki: LC-XGA970  
Eiki: LC-XGA980  
Eiki: LC-XGA982

Eiki: LC-XIP2600  
Eiki: LC-XIP2610  
Eiki: LC-XSP2600

Eiki: LC-XM1  
Eiki: LC-XM2  
Eiki: LC-XM4

Eiki: LC-XNB1  
Eiki: LC-XNB2  
Eiki: LC-XNB3  
Eiki: LC-XNB4  
Eiki: LC-XNB5  
Eiki: LC-XNP4000

Eiki: LC-XS25  
Eiki: LC-XS30  
Eiki: LC-XT1  
Eiki: LC-XT2  
Eiki: LC-XT3  
Eiki: LC-XT4  
Eiki: LC-XT5  
Eiki: LC-XT9

---

**Epson Generic 1**

**Epson Generic 2**

Epson: EB-92  
Epson: EB-93e  
Epson: EB-95  
Epson: EB-96W  
Epson: EB-97  
Epson: EB-98  
Epson: EB-99W  
Epson: EB-420  
Epson: EB-425W  
Epson: EB-430  
Epson: EB-435W  
Epson: EB-440W  
Epson: EB-450W/i  
Epson: EB-455Wi  
Epson: EB-460/i  
Epson: EB-465i  
Epson: EB-470  
Epson: EB-475W/Wi  
Epson: EB-480/i  
Epson: EB-485W/Wi

Epson: EB-520W  
Epson: EB-525W  
Epson: EB-530W  
Epson: EB-535W  
Epson: EB-536W/i/T

Epson: EB-570  
Epson: EB-575W/i

Epson: EB-580  
Epson: EB-585W/i  
Epson: EB-590WT  
Epson: EB-595Wi

Epson: EB-900  
Epson: EB-905  
Epson: EB-910W  
Epson: EB-915W  
Epson: EB-925  
Epson: EB-935  
Epson: EB-940  
Epson: EB-945  
Epson: EB-950W  
Epson: EB-955W  
Epson: EB-965  
Epson: EB-1400Wi  
Epson: EB-1410Wi  
Epson: EB-1420Wi  
Epson: EB-1430Wi  
Epson: EB-1830  
Epson: EB-1840W  
Epson: EB-1850W  
Epson: EB-1860  
Epson: EB-1870  
Epson: EB-1880  
Epson: EB-1900  
Epson: EB-1910  
Epson: EB-1915  
Epson: EB-1920W  
Epson: EB-1925W

Epson: EB-1930  
Epson: EB-1935  
Epson: EB-1940W  
Epson: EB-1945W  
Epson: EB-1950  
Epson: EB-1954  
Epson: EB-1955  
Epson: EB-1960  
Epson: EB-1964  
Epson: EB-1965  
Epson: EB-1970W  
Epson: EB-1975W  
Epson: EB-1980WU  
Epson: EB-1985WU  
Epson: EB-4550  
Epson: EB-4650  
Epson: EB-4750W  
Epson: EB-4850WU  
Epson: EB-4855WU  
Epson: EB-4950WU  
Epson: EB-4955WU  
Epson: EB-D6150  
Epson: EB-D6155W  
Epson: EB-D6250

Epson: EB-G5000  
Epson: EB-G5100  
Epson: EB-G5150  
Epson: EB-G5200W  
Epson: EB-G5300  
Epson: EB-G5350

Epson: EB-G5450WU  
Epson: EB-G5500  
Epson: EB-G5550  
Epson: EB-G5600  
Epson: EB-G5750WU  
Epson: EB-G5800  
Epson: EB-G5900  
Epson: EB-G5950

Epson: EB-G6050W  
Epson: EB-G6070W  
Epson: EB-G6150  
Epson: EB-G6170  
Epson: EB-G6250W  
Epson: EB-G6270W  
Epson: EB-G6350  
Epson: EB-G6370  
Epson: EB-G6450WU  
Epson: EB-G6470WU  
Epson: EB-G6550WU  
Epson: EB-G6570WU  
Epson: EB-G6650WU  
Epson: EB-G6750WU  
Epson: EB-G6770WU  
Epson: EB-G6800  
Epson: EB-G6900WU

Epson: EB-S11/H  
Epson: EB-S12  
Epson: EB-S17  
Epson: EB-S21

Epson: EB-W17  
Epson: EB-W22

Epson: EB-X11/H  
Epson: EB-X14H  
Epson: EB-X15  
Epson: EB-X17  
Epson: EB-X20

Epson: EB-X21  
Epson: EB-X22  
Epson: EB-X25

Following use **EB-Z Generic**:

Epson: EB-Z8000W/WU,  
Epson: EB-Z8050WU,  
Epson: EB-Z8150,  
Epson: EB-Z5250,  
Epson: EB-Z8255NL,  
Epson: EB-Z8350W,  
Epson: EB-Z8355W,  
Epson: EB-Z8450WU,  
Epson: EB-Z8455WU,  
Epson: EB-Z9750,  
Epson: EB-Z9800,  
Epson: EB-Z9805W,  
Epson: EB-Z9810,  
Epson: EB-Z9850W,  
Epson: EB-Z9870/U,  
Epson: EB-Z9875/U,  
Epson: EB-Z9900/W,  
Epson: EB-Z10000/UNL,  
Epson: EB-Z10005/UNL  
Epson: EB-Z11000/W  
Epson: EB-Z11005

Epson: EMP-50  
Epson: EMP-51  
Epson: EMP-70  
Epson: EMP-71  
Epson: EMP-400W  
Epson: EMP-410W  
Epson: EMP-500  
Epson: EMP-503  
Epson: EMP-700  
Epson: EMP-703  
Epson: EMP-710  
Epson: EMP-713

Epson: EMP-5300  
Epson: EMP-5350  
Epson: EMP-5500  
Epson: EMP-5600  
Epson: EMP-7200  
Epson: EMP-7250  
Epson: EMP-7300  
Epson: EMP-7350  
Epson: EMP-7600  
Epson: EMP-7850  
Epson: EMP-8000  
Epson: EMP-9000  
Epson: EMP-9100

Epson: EMP/EH-TW100  
Epson: EMP/EH-TW400  
Epson: EMP-/EHTW520  
Epson: EMP/EH-TW550  
Epson: EMP/EH-TW600  
Epson: EMP/EH-TW700  
Epson: EMP/EH-TW800

Epson: EH-TW1000  
Epson: EH-TW2000  
Epson: EH-TW2800  
Epson: EH-TW2900  
Epson: EH-TW3000  
Epson: EH-TW3200  
Epson: EH-TW3500  
Epson: EH-TW3600  
Epson: EH-TW3800  
Epson: EH-TW4000  
Epson: EH-TW4400  
Epson: EH-TW4500  
Epson: EH-TW5000  
Epson: EH-TW5500  
Epson: EH-TW5900  
Epson: EH-TW6000/W  
Epson: EH-TW8000/W  
Epson: EH-TW9000/W

---

Fuji: Large number of Plasma screens, all same code.

Fuji: LPF4200  
Fuji: LPF4700

Fuji: LPF5200  
Fuji: LPF6200

---

Everest: EX-27020  
Everest: EX-27025

Everest: EX-28030  
Everest: EX-31025

Everest: EX-31032  
Everest: EX-31036

---

Hewlett Packard  
HP: vp6110 \*  
HP: vp6111 \*  
HP: vp6120 \*

HP: vp6121 \*  
HP: vp6311 \*  
HP: vp6315 \*  
HP: vp6320 \*

HP: vp6321 \*  
HP: vp6325 \*  
HP: xp8010  
HP: xp8020

---

Hitachi: Generic 1  
Hitachi: Generic 2  
Hitachi: CP-A52

Hitachi: CP-A100  
Hitachi: CP-A200/N  
Hitachi: CP-A221N

Hitachi: CP-A220  
Hitachi: CP-A222WN  
Hitachi: CP-A300

Hitachi: CP-A301N  
Hitachi: CP-A302WN  
Hitachi: CP-A352WN  
Hitachi: CP-AW250N/M  
Hitachi: CP-AW251N  
Hitachi: CP-AW252WN  
Hitachi: CP-AW312WN  
Hitachi: CP-AW2503  
Hitachi: CP-AW2519NM  
Hitachi: CP-AW3003

Hitachi: CP-AX2503  
Hitachi: CP-AX3003  
Hitachi: CP-AX3503

Hitachi: CP-D10  
Hitachi: CP-DW10N  
Hitachi: CP-D20  
Hitachi: CP-D27WN  
Hitachi: CP-D31N  
Hitachi: CP-D32WN  
Hitachi: CP-DW25WN

Hitachi: CP-EW250N  
Hitachi: CP-EX250N  
Hitachi: CP-EW300N  
Hitachi: CP-EX300N

Hitachi: CP-TW2503

Hitachi: CP-X/WX8

---

Hit LCD Generic:  
FHD6514

---

IIZEL LCD: ZWP-42

ZWP-47

---

**New InFocus projectors:**

**IN3x series:** IN32, IN34, IN36,  
IN35/W, IN37

**IN100 series:** IN112, IN114,  
IN116, IN124, IN126

IN146

**IN2100 series:**  
IN2102/IN2104/IN2106, IN3914

**IN2110 series:** IN2112, IN2114,  
IN2116

---

**LG: LCD/Plasma**

Hitachi: CP-X9  
Hitachi: CP-X417  
Hitachi: CP-X450  
Hitachi: CP-X615  
Hitachi: CP-WX625  
Hitachi: CP-SX635  
Hitachi: CP-X705  
Hitachi: CP-S845W  
Hitachi: CP-X935W  
Hitachi: CP-X940W  
Hitachi: CP-X950W  
Hitachi: CP-X955W  
Hitachi: CP-X960W  
Hitachi: CP-X970W  
Hitachi: CP-X980W  
Hitachi: CP-X985W  
Hitachi: CP-X2010  
Hitachi: CP-X2011/N  
Hitachi: CP-X2012WN  
Hitachi: CP-X2015WN  
Hitachi: CP-X2020  
Hitachi: CP-X2510  
Hitachi: CP-X2511/N  
Hitachi: CP-X2514WN  
Hitachi: CP-X2515WN  
Hitachi: CP-X2520  
Hitachi: CP-X2521WN  
Hitachi: CP-X2530WN  
Hitachi: CP-X3010  
Hitachi: CP-X3011/N  
Hitachi: CP-X3014WN

---

FHD6516:  
Hitachi LCD

---

ZWP-52

---

**IN3100 series:**

IN3102/IN3104/IN3106/IN3108

**IN3110 series:** IN3114, IN3116

**IN3900 series:** IN3916

**IN5100 series:**  
IN5102/IN5104/IN5106/IN5108/  
IN5110

**IN5300 series:** IN5302, IN5304

**IN5500 series:** IN5502, IN5504,  
IN5532, IN5533, IN5535

**IN8602 series:** SP8602, SP8682

---

Hitachi: CP-WX/X3015WN  
Hitachi: CP-X3020  
Hitachi: CP-X3021N  
Hitachi: CP-X3030WN  
Hitachi: CP-X3511  
Hitachi: CP-WX3530WN  
Hitachi: CP-X4011/N  
Hitachi: CP-X4014WN  
Hitachi: CP-X4015WN  
Hitachi: CP-X4020  
Hitachi: CP-X/WX4021/N  
Hitachi: CP-X/WX4022WN  
Hitachi: CP-X4030WN  
Hitachi: CP-X5021/N  
Hitachi: CP-X5022WN  
Hitachi: CP-SX8350  
Hitachi: CP-WU8440  
Hitachi: CP-WU8450  
Hitachi: CP-WU8460  
Hitachi: CP-WX8240  
Hitachi: CP-WX8255  
Hitachi: CP-WX8265  
Hitachi: CP-X8150  
Hitachi: CP-X8160  
Hitachi: CP-X8170  
Hitachi: CP-X9110  
Hitachi: CP-X9111  
Hitachi: CP-X9111  
Hitachi: CP-WX9210  
Hitachi: CP-WX9211  
Hitachi: CP-WU9410  
Hitachi: CP-WU9411

---

HILFxx10x at 9600,  
HILFxx20x at 115k

---

**X6, X7, X9 X15 series:** X6/C,  
X7/C, X9, X15

**Older InFocus projectors:**

Deleted at 3.11 except following  
re-instated at 3.21:

LP540  
LP640  
LP650  
LP815  
LP820  
LP840  
LP850  
LP860

---

77 models plus 100's of variations. See panel manuals for code allocations in back of books.

**Groups A, B, C:** "kb" codes

**Group D:** "I" codes:  
ZENITH\_PLASMA\_P42W26  
ZENITH\_PLASMA\_P60W26

**Group E:** "xb" codes:

26/32/37/42LG3XX,  
42/47LG5XX,  
32/42/47/52LG6XX,  
42/47/52LG7,  
42/50/60PG2/3/6/7

**Group F:** drop TV-A, add HDMI2

**Group G:** move RGB to code 60h  
26/32LK3\*\*

32/42LK4\*\*  
42LK5\*\*  
19/22/26/32LV2\*\*\*  
32/37/42/55LV3\*\*\*  
42/50/60PW3\*\*  
60/60PZ2\*

**Group H:** RGB: code 60h  
HDMI/PC code A0

---

**LG LCD/Plasma**

Most available covered, e.g. LG  
**Plasma:** PA, PT, PV, PW, PZ

---

LG PROJ: RD-JT50

---

Microsoft Surface

---

---

**LG LCD:** LK, LV, LW, LZ , LY  
SE, SL

---

LG PROJ: RD-JT51

---

LG PROJ: RD-JT52

---

Mit LCD: DV320  
Mit LCD: DV420  
Mit LCD: LDT321V  
Mit LCD: LDT322V  
Mit LCD: LDT323V  
Mit LCD: LDT371V  
Mit LCD: LDT421V  
Mit LCD: MDT521S  
Mit LCD: LDT421VNEC  
Mit LCD: LDT422V  
Mit LCD: LDT461V  
Mit LCD: LDT461VNEC  
Mit LCD: MDT551S  
Mit LCD: LDT551V  
Mit LCD: LDT651L/P  
Mit LCD: MDT401S  
Mit LCD: MDT321S  
Mit LCD: MDT421S  
Mit LCD: MDT521S

Mit: EX10U  
Mit: EX51U  
Mit: EX52U  
Mit: EX53U/E  
Mit: EX241U  
Mit: ES/EX100U  
Mit: EW330U/ST  
Mit: EW331U/ST  
Mit: EX320U/ST  
Mit: EX321U/ST

Mit: FD730U/G

Mit: FL6900U  
Mit: FL7000U/LU

Mit: HC100  
Mit: HC900/E  
Mit: HC1100  
Mit: HC1500

Mit: HC1600  
Mit: HC3000  
Mit: HC3100  
Mit: HC3800  
Mit: HC3900  
Mit: HC4000  
Mit: HC4900  
Mit: HC5000  
Mit: HC5500  
Mit: HC6000  
Mit: HC6500  
Mit: HC6800  
Mit: HC7000  
  
Mit: HD1000  
Mit: HD4000  
Mit: HD8000  
  
Mit: HL2750U

Mit: MH2850U  
  
Mit: NF32U  
Mit: NW30U  
Mit: NW31U-EST  
  
Mit: SA51U  
  
Mit: WL639U  
Mit: WL2650U  
Mit: WL6700U/LU

Mit: S/X50U  
Mit: X70U  
Mit: X80U  
Mit: X100E  
Mit: S/X120E  
Mit: X200E  
Mit: S/X250U  
Mit: S290U

Mit: X300U  
Mit: X390U  
Mit: X400U  
Mit: S/X490U  
Mit: X500U  
Mit: XD95U

DLP

Mit: SD/XD105U  
Mit: SD/XD200U  
Mit: SD/XD206U  
Mit: XD211U  
Mit: SD220U  
Mit: SD/XD221U  
Mit: XD250U/ST  
Mit: XD280U  
Mit: XD300U  
Mit: XD350U  
Mit: XD360U-EST  
Mit: XD365U-EST  
Mit: XD380U-EST  
Mit: XD385U-EST  
Mit: WD390U/EST  
Mit: XD400U  
Mit: SD/XD420U  
Mit: SD/XD430U  
Mit: XD435U  
Mit: XD450U  
Mit: XD460U  
Mit: XD470U  
Mit: XD480U  
Mit: XD490U  
Mit: WD/XD500U  
Mit: SD/WD/XD510U  
Mit: XD520U  
Mit: XD530U/E  
Mit: XD550U  
Mit: XD560U  
Mit: XD570U

Mit: XD600U/G  
Mit: XD700U  
Mit: WD720U  
Mit: WD620U/G  
Mit: FD630U/G  
Mit: XD1000U  
Mit: WD2000  
Mit: XD2000U  
Mit: WD/XD3200U  
Mit: WD3300  
Mit: XD3500U  
Mit: WD8200U/LU  
Mit: WD8700U

---

Mit: UD740U  
Mit: UD8350U  
Mit: UD8400U  
  
LCD  
  
Mit: SL/XL1-U  
Mit: SL/XL2U  
Mit: SL/XL4U  
Mit: SL/XL5U  
Mit: SL6U  
Mit: XL6U  
Mit: XL8U  
Mit: XL9U

---

Mit: SL/XL25U  
Mit: XL30U  
Mit: XL550U  
Mit: XL650U  
Mit: XL1550U  
Mit: XL2550U  
Mit: XL5900U  
Mit: XL5950U  
Mit: XL5980U/LU  
Mit: XL6500U/LU  
Mit: XL6600U/LU

---

**NEC LCD (E-series):**

NEC LCD: E324  
NEC LCD: E424  
NEC LCD: E464  
NEC LCD: E554  
NEC LCD: E654

NEC LCD3000  
NEC LCD3210  
NEC LCD3215  
NEC LCD4000  
NEC LCD4010  
NEC LCD4020  
NEC LCD4215  
NEC LCD4610  
NEC LCD4620  
NEC LCD5220  
NEC LCD5710  
NEC LCD6520

---

**NEC LCD8205**

Many prefixes to model numbers:

NEC V322  
NEC M\_P\_S\_X401  
NEC P402  
NEC V422  
NEC V423  
NEC X431BT  
NEC M\_P\_S\_X461\_S  
NEC P\_V\_X462\_S  
NEC V\_X463  
NEC X464UN/UNV  
NEC M\_P\_S521  
NEC V\_X551S\_U  
NEC P\_V\_X552  
NEC P553  
NEC X554UN/UNS  
NEC V651

---

NEC V652  
NEC P701  
NEC P702  
NEC P703  
NEC V801

NEC M40 Multeos, Digital TV  
NEC M46 Multeos, Digital TV  
NEC M40 Old T1, Analog TV  
NEC M46 Old T1, Analog TV  
NEC M40 Old T2, Digital TV  
NEC M46 Old T2, Digital TV

NEC NLT-40FHD100  
NEC NLT-46FHD100

NEC SC40  
NEC SC46

---

NEC Plasma: 42XC10  
NEC Plasma: 42XP10  
NEC Plasma: 50XC10  
NEC Plasma: 50XP10  
NEC Plasma: 60XC10  
NEC Plasma: 60XP10

NEC Plasma: PX42VM5  
NEC Plasma: PX42VP4  
NEC Plasma: PX42VP5  
NEC Plasma: PX42XM2

---

NEC Plasma: PX42XM3  
NEC Plasma: PX42XM4  
NEC Plasma: PX42XM5  
NEC Plasma: PX42XR3  
NEC Plasma: PX42XR4  
NEC Plasma: PX42XR5  
NEC Plasma: PX42VR5  
NEC Plasma: PX50XM3  
NEC Plasma: PX50XM4  
NEC Plasma: PX50XM5  
NEC Plasma: PX50XM6

---

NEC Plasma: PX50XR4  
NEC Plasma: PX50XR5  
NEC Plasma: PX50XR6  
NEC Plasma: PX60XM5  
NEC Plasma: PX60XR5  
NEC Plasma: PX61XM2  
NEC Plasma: PX61XM3  
NEC Plasma: PX61XM4  
NEC Plasma: PX61XR3  
NEC Plasma: PX61XR4

---

NEC: GT950  
NEC: GT1150  
NEC: GT1200  
NEC: GT2000  
NEC: GT2150  
NEC: GT5000  
NEC: GT6000

NEC: HT410  
NEC: HT510  
NEC: HT1000  
NEC: HT1100

NEC: LT25  
NEC: LT30  
NEC: LT35  
NEC: LT75Z  
NEC: LT84  
NEC: LT85  
NEC: LT140  
NEC: LT150  
NEC: LT154  
NEC: LT155  
NEC: LT156  
NEC: LT157  
NEC: LT158

NEC: LT180  
NEC: LT220  
NEC: LT240  
NEC: LT245  
NEC: LT260  
NEC: LT265  
NEC: LT280  
NEC: LT380

NEC: M230X  
NEC: M260X/W/WS  
NEC: M271W/X  
NEC: M282X

NEC: M300X/W  
 NEC: M302WS  
 NEC: M311W/X  
 NEC: M322W/X  
 NEC: M332XS  
 NEC: M350X/XS  
 NEC: M352WS  
 NEC: M361X  
 NEC: M362W/X  
 NEC: M402W/X  
  
 NEC: NP40  
 NEC: NP41  
 NEC: NP43  
 NEC: NP50  
 NEC: NP51  
 NEC: NP54  
 NEC: NP60  
 NEC: NP61  
 NEC: NP62  
 NEC: NP63  
 NEC: NP64  
 NEC: NP110  
 NEC: NP115  
 NEC: NP210  
 NEC: NP215  
 NEC: NP216  
 NEC: NP300  
 NEC: NP305  
 NEC: NP310  
 NEC: NP400  
 NEC: NP405  
 NEC: NP410/W  
 NEC: NP500/W  
 NEC: NP510/W/WS  
 NEC: NP600/S  
 NEC: NP610/S  
 NEC: NP901W  
 NEC: NP905  
 NEC: NP1000  
 NEC: NP1150  
 NEC: NP1200  
 NEC: NP1250  
 NEC: NP2000  
 NEC: NP2150  
 NEC: NP2200

NEC: NP2250  
 NEC: NP3150  
 NEC: NP3151  
 NEC: NP3200  
 NEC: NP3250  
 NEC: NP4000  
 NEC: NP4001  
 NEC: NP4100/W  
  
 NEC: P350W/X  
 NEC: P401W  
 NEC: P420X  
 NEC: P451W\_X  
 NEC: P501X  
  
 NEC: PA500U/X  
 NEC: PA521U  
 NEC: PA522U  
 NEC: PA550W  
 NEC: PA571W  
 NEC: PA572W  
 NEC: PA600X  
 NEC: PA621U/X  
 NEC: PA622U/X  
 NEC: PA671W  
 NEC: PA672W  
 NEC: PA721X  
 NEC: PA722X  
  
 NEC: PE401H  
 NEC: PE501X  
  
 NEC: PH1000U  
  
 NEC: PX602U/W  
 NEC: PX700W  
 NEC: PX750U  
 NEC: PX800X  
  
 NEC: U250X  
 NEC: U260W  
 NEC: U300X  
 NEC: U310W  
  
 NEC: UM280W/X  
 NEC: UM301W/X

NEC: UM330W/X  
 NEC: UM351W  
 NEC: UM361X  
  
 NEC: V230/X  
 NEC: V260/W  
 NEC: V300W/X  
  
 NEC: VE280/X  
 NEC: VE281/X  
 NEC: VE282/X  
  
 NEC: VT37  
 NEC: VT45  
 NEC: VT46  
 NEC: VT47  
 NEC: VT48 \* No parallel  
 NEC: VT49  
 NEC: VT57  
 NEC: VT58 \* No parallel  
 NEC: VT59  
 NEC: VT440  
 NEC: VT460  
 NEC: VT465  
 NEC: VT470  
 NEC: VT480 \* No parallel  
 NEC: VT490  
 NEC: VT540  
 NEC: VT560  
 NEC: VT570  
 NEC: VT575  
 NEC: VT580 \* No parallel  
 NEC: VT590  
 NEC: VT595  
 NEC: VT650  
 NEC: VT660  
 NEC: VT670  
 NEC: VT676  
 NEC: VT695  
 NEC: VT700  
 NEC: VT770  
 NEC: VT800  
  
 NEC: WT600  
 NEC: WT610  
 NEC: WT615

---

Note: Optoma projectors use a leading 2-character code (DS, EX, etc which are variations of a number of similar models sharing the same commands. On the T460 screen (12 character wide), we show these prefixes as: D/E/S/Xxxx which covers variations such as DSxxx, DXxxx, ESxxx, and EXxxx  
  
 Optoma: C222  
  
 Optoma: D25\_LV

---

Optoma: DH1011  
 Optoma: DH1015  
  
 Optoma: DS211  
 Optoma: DS216  
 Optoma: DS219  
 Optoma: DS309  
 Optoma: DS316  
 Optoma: DS317  
 Optoma: DS318  
 Optoma: DS319  
 Optoma: DS323  
 Optoma: DS327  
 Optoma: DS329  
 Optoma: DS339

---

Optoma: DS550  
 Optoma: DS551  
  
 Optoma: DW339  
  
 Optoma: DX211  
 Optoma: DX319  
 Optoma: DX327  
 Optoma: DX339  
 Optoma: DX550  
 Optoma: DX551  
 Optoma: DX609  
 Optoma: DX617  
 Optoma: DX623  
 Optoma: EH300



Optoma: EH500	Optoma: EX520	Optoma: HD600X
Optoma: EH_W_X501	Optoma: EX521	Optoma: HD8200
Optoma: EH_W505	Optoma: EX525ST	Optoma: HD8600
Optoma: EH1020	Optoma: EX530	
Optoma: EH1060	Optoma: EX531	Optoma: PRO150S
Optoma: EH2060	Optoma: EX532	Optoma: PRO160S
Optoma: EH7500	Optoma: EX536	Optoma: PRO250X
Optoma: EH7700	Optoma: EX538	Optoma: PRO260X
	Optoma: EX540	Optoma: PRO350W
Optoma: EP706	Optoma: EX542	Optoma: PRO360W
Optoma: EP708S	Optoma: EX525st	Optoma: PRO8000
Optoma: EP709	Optoma: EX531	
Optoma: EP712E	Optoma: EX536	Optoma: S_W_X303
Optoma: EP719H	Optoma: EX522	Optoma: S_X2010
Optoma: EP721	Optoma: EX550	Optoma: S_W_X2015
Optoma: EP723	Optoma: EX551	
Optoma: EP727	Optoma: EX555	Optoma: TH1020
Optoma: EP728	Optoma: EX556	Optoma: TH1060
Optoma: EP739**	Optoma: EX565UT	Optoma: TH7500
Optoma: EP751	Optoma: EX665UST	
Optoma: EP752	Optoma: EX605st	Optoma: TS526
Optoma: EP758	Optoma: EX610st	Optoma: TS551
Optoma: EP759	Optoma: EX612	
Optoma: EP761	Optoma: EX615	Optoma: TW536
Optoma: EP763	Optoma: EX635	Optoma: TW556
Optoma: EP771	Optoma: EX672	Optoma: TW610st
Optoma: EP772	Optoma: EX675/W	Optoma: TW615
Optoma: EP774	Optoma: EX772	Optoma: TW631
Optoma: EP776	Optoma: EX779	Optoma: TW635
Optoma: EP780***	Optoma: EX785	Optoma: TW672
Optoma: EP781	Optoma: EX&TX612	Optoma: TW675UT
Optoma: EP782W	Optoma: EX615	Optoma: TW766W
Optoma: EP783	Optoma: EX685UT	Optoma: TW775
Optoma: EP810***	Optoma: EW695UTi	Optoma: TW6000
Optoma: EP910***	Optoma: EX762	Optoma: TWR1693
Optoma: EP1080	Optoma: EX765W	
Optoma: EP1690 *	Optoma: EX772	Optoma: TX536
	Optoma: EX774	Optoma: TX610st
Optoma: ES520	Optoma: EX785	Optoma: TX612
Optoma: ES521	Optoma: EX850	Optoma: TX631
Optoma: ES522	Optoma: EX855	Optoma: TX540
Optoma: ES526	Optoma: EX865	Optoma: TX542
Optoma: ES530		Optoma: TX551
Optoma: ES550	Optoma: GT360	Optoma: TX565UT
Optoma: ES551	Optoma: GT700	Optoma: TX635
Optoma: ES555	Optoma: GT720	Optoma: TX665UST
Optoma: ES556	Optoma: GT750E	Optoma: TX762
		Optoma: TX765W
Optoma: EW536	Optoma: H57	Optoma: TX778W
Optoma: EW556	Optoma: HD33	Optoma: TX779
Optoma: EW605st	Optoma: HD3300	Optoma: TX783
Optoma: EW610st	Optoma: HD66	Optoma: TX785
Optoma: EW635	Optoma: HD67	Optoma: TX1080
Optoma: EW672	Optoma: HD6700	Optoma: TX7000
Optoma: EW674	Optoma: HD71	Optoma: TXR774
Optoma: EW675UT	Optoma: HD75	
Optoma: EW728	Optoma: HD82LV	Optoma: W_X401
Optoma: EW766W	Optoma: HD8200	Optoma: W290
Optoma: EW775	Optoma: HD83	Optoma: W_X305ST
Optoma: EW860	Optoma: HD8300	Optoma: W_X306ST
Optoma: EW1610	Optoma: HD86	Optoma: W_X307USTi
	Optoma: HD8600	Optoma: W316
Optoma: EX400	Optoma: HD87	

Optoma: X600  
Optoma: X605

ZW\_ZX\_201<sup>ST</sup>

---

Panasonic: PT-AE900  
Panasonic: PT-AE4000  
Panasonic: PT-AE7000  
Panasonic: PT-AE8000EH  
  
Panasonic: PT-AH1000  
  
Panasonic: PT-AT5000E  
Panasonic: PT-AT6000E  
  
Panasonic: PT-AR100  
  
Panasonic: PT-AX100  
Panasonic: PT-AX200  
  
Panasonic: PT-CW230  
Panasonic: PT-CW240  
Panasonic: PT-CW330  
  
Panasonic: PT-CX200  
Panasonic: PT-CX300  
  
Panasonic: PT-D5000E  
Panasonic: PT-D6000E  
  
Panasonic: PT-DS20K  
Panasonic: PT-DS100XE  
Panasonic: PT-DS8500U  
  
Panasonic: PT-DW17K  
Panasonic: PT-DW90XE  
Panasonic: PT-DW100E  
Panasonic: PT-DW530E  
Panasonic: PT-DW640KLS  
Panasonic: PT-DW730/L/S/K  
Panasonic: PT-DW740KLS  
  
Panasonic: PT-DW6300E  
Panasonic: PT-DW8300U  
  
Panasonic: PT-DX500E  
Panasonic: PT-DX800/L/S/K  
Panasonic: PT-DX810KLS  
  
Panasonic: PT-DZ21K  
Panasonic: PT-DZ110XE  
Panasonic: PT-DZ570E  
Panasonic: PT-DZ680KLSPT  
Panasonic: PT-DZ770K/L/S  
Panasonic: PT-DZ6700E  
Panasonic: PT-DZ6710E  
Panasonic: PT-DZ8700U

---

Panasonic LCD  
TH-42LF6U  
TH-47LF6U

ZW\_ZX\_212ST

\* need f/w update to clear O. S.  
Display

---

Panasonic: PT-EW530/L  
Panasonic: PT-EW540  
Panasonic: PT-EW630/L  
Panasonic: PT-EW640/L  
  
Panasonic: PT-EX12KU/E  
Panasonic: PT-EX16K  
Panasonic: PT-EX500/L  
Panasonic: PT-EX510  
Panasonic: PT-EX600/L  
Panasonic: PT-EX610  
  
Panasonic: PT-EZ570/L  
Panasonic: PT-EZ580  
Panasonic: PT-F100  
Panasonic: PT-F200E  
Panasonic: PT-F200NTE  
Panasonic: PT-F100  
Panasonic: PT-F300U/NTU  
  
Panasonic: PT-FW100  
Panasonic: PT-FW300  
Panasonic: PT-FW430  
  
Panasonic: PT-FX400  
  
Panasonic: PT-LB1EA  
Panasonic: PT-LB2EA  
Panasonic: PT-LB3EA  
  
Panasonic: PT-LB90/NT/E  
  
Panasonic: PT-LC55  
Panasonic: PT-LC56  
Panasonic: PT-LC75  
Panasonic: PT-LC76  
Panasonic: PT-LC80  
  
Panasonic: PT-LW80  
Panasonic: PT-LW271  
Panasonic: PT-LW321  
  
Panasonic: PT-LX22  
Panasonic: PT-LX22U/E/EA  
Panasonic: PT-LX25HU/E/EA  
Panasonic: PT-LX26  
Panasonic: PT-LX26U/E/EA  
Panasonic: PT-LX26HU/E/EA  
Panasonic: PT-LX30HU/E/EA  
  
Panasonic: PT-LX270

---

TH-55LF6U  
TH-42LF30U  
TH-47LF30U  
TH-70LF50W

\*\* May need proj firmware  
update  
\*\*\* In test

---

Panasonic: PT-LX271  
Panasonic: PT-LX300  
Panasonic: PT-LX321  
Panasonic: PT-LX351  
  
Panasonic: PT-LZ370  
  
Panasonic: PT-RW330  
Panasonic: PT-RW430  
Panasonic: PT-RW630  
Panasonic: PT-RZ370  
Panasonic: PT-RZ470  
Panasonic: PT-RZ670  
  
Panasonic: PT-SLX12KC  
  
Panasonic: PT-ST10E  
  
Panasonic: PT-TW230U/E/EA  
Panasonic: PT-TW231RU/E/EA  
  
Panasonic: PT-UW250  
  
Panasonic: PT-UX220  
Panasonic: PT-UX/X260  
Panasonic: PT-UX/X300  
  
Panasonic: PT-XW23ST  
Panasonic: PT-XW25SR  
Panasonic: PT-VW330  
Panasonic: PT-VW430  
Panasonic: PT-VW435  
Panasonic: PT-VW431D  
Panasonic: PT-VW530  
Panasonic: PT-VW535N  
Panasonic: PT-VX45  
Panasonic: PT-VX60  
P Panasonic: T-VX405  
Panasonic: PT-VX501  
Panasonic: PT-VX600  
Panasonic: PT-VX605N  
Panasonic: PT-VZ570  
Panasonic: PT-VZ575N  
  
Panasonic: PT-VX41  
Panasonic: PT-VX400  
Panasonic: PT-VX500  
Panasonic: PT-VX505N  
  
Panasonic: PT-X610KLS

---

TH-80LF50W  
TH-42LF60U  
TH-47LF60U  
TH-55LF60U

TH-42LFP30  
TH-47LFP30,  
TH-42LF5U

---

Panasonic Plasma: Thirteen groups covered in form: TH-nnPxxGrp3 to TH-nnPxxGrp12, 20 The nn is the panel size from 37 to 103 inches.

---

PHANTOM: ASCII readable simulation codes transmitted for test purposes

---

Pioneer Plasma: Many models, all with same code. Some covered are:  
PDP-42/50MXE10

---

PLANAR: PR5020

---

Philips: BDL Series, Protocol 1.6, 1.86, 1.88, 1.92  
  
BDL4230E/BDL4230ET  
BDL4651VH

---

PIONEER PLASMA:  
PDP-43MXE1

---

PLUS: U2-817  
PLUS: U2-1200  
PLUS: U4-136  
PLUS: U5-132

---

Promethean: PRM-10  
Promethean: PRM-20/A

---

Projection-Design-ASCII  
F12, FR12, F22, F32, FL32, F80, F82 (Shows on LCD screen as "Proj. Design" "F12-F82")

---

Proxima: DP6150  
Proxima: DP6155  
Proxima: DP6500  
Proxima: DP8200x

---

Samsung: LCD  
Samsung Generic1:  
SyncMaster (320/400/460 M/P/Pn\*) and newer series:

TH-47LF5U  
TH-42LFE6E  
TH-50LFE6E

---

The Px is a one, two or three letter. The group is the Panasonic "generation". There are often one or two letters following.

---

PDP-42/50MXE11  
PDP-42/50/60MXE20  
PDP-43/50MXE1  
PDP-425/525CMX

---

BDL4675XU  
BDL4681XU  
BDL4785SL  
BDL5530EL  
BDL5585XL

---

PDP-50MXE1  
PDP-504CMX

---

PLUS: U5-232  
PLUS: U5-332  
PLUS: U5-432  
PLUS: U5-532

---

Promethean: PRM-25 IN TEST  
Promethean: PRM-30

---

Projection-Design-32-byte Binary  
projectiondesign Action! (etc)  
projectiondesign evo (etc)  
projectiondesign eCinema (etc)

---

Proxima: DP8400x  
Proxima: DP8500x  
Proxima: DP9240  
Proxima: DP9260

---

DB, DE, DH, DM, EDxxC,  
EDxxD, H, LE, ME, PE, UD and  
UE.

TH-47LFT30  
TH-47LFX6J

---

TH\_nnVX100

---

PDP-434/505CMX

---

BDL6450AT  
BDL6531E  
BDL6551V

---

PLUS: U5-632  
PLUS: U5-732  
PLUS: U7-132  
PLUS: U7-137

---

Promethean: PRM-35-EST-P1

---

projectiondesign F1 (etc)  
projectiondesign F2 (etc)  
projectiondesign F3 (etc)

---

Proxima: DP9280  
Proxima: DP9290

---

---

Sanyo LCD: 42XR7

---

Sanyo: PDG-DET100  
Sanyo: PDG-DHT100L  
Sanyo: PDG-DSU30  
Sanyo: PDG-DWL100  
Sanyo: PDG-DWL2500  
Sanyo: PDG-DWT50L/KL  
Sanyo: PDG-DXL100  
Sanyo: PDG-DXL2000  
Sanyo: PDG-DXT10L

Sanyo: PLC-5600  
Sanyo: PLC-8800  
Sanyo: PLC-8810  
Sanyo: PLC-9000

Sanyo: PLC-EF10  
Sanyo: PLC-EF12  
Sanyo: PLC-EF30  
Sanyo: PLC-EF31  
Sanyo: PLC-EF60

Sanyo: PLC-ET30L

Sanyo: PLC-SC10  
Sanyo: PLC-SE20  
Sanyo: PLC-SL15  
Sanyo: PLC-SL20  
Sanyo: PLC-SP10  
Sanyo: PLC-SP18  
Sanyo: PLC-SP20  
Sanyo: PLC-SU07  
Sanyo: PLC-SU10  
Sanyo: PLC-SU15  
Sanyo: PLC-SU20  
Sanyo: PLC-SU22  
Sanyo: PLC-SU25  
Sanyo: PLC-SU30  
Sanyo: PLC-SU31  
Sanyo: PLC-SU32  
Sanyo: PLC-SU33N  
Sanyo: PLC-SU50  
Sanyo: PLC-SU51  
Sanyo: PLC-SU55  
Sanyo: PLC-SU60  
Sanyo: PLC-SU70  
Sanyo: PLC-SW10  
Sanyo: PLC-SW15  
Sanyo: PLC-SW20  
Sanyo: PLC-SW30  
Sanyo: PLC-SW35

Sanyo: PLC-UF10  
Sanyo: PLC-UF15

Sanyo: PLC-WK2500

Sanyo: PLC-WL2500  
Sanyo: PLC-WL2501

---

Sanyo LCD: 47XR7

---

Sanyo: PLC-WM4500  
Sanyo: PLC-WM5500

Sanyo: PLC-WTC500L

Sanyo: PLC-WXE45  
Sanyo: PLC-WXE46  
Sanyo: PLC-WXL46

Sanyo: PLC-WXU10N  
Sanyo: PLC-WXU30  
Sanyo: PLC-WXU30 Alt chan set

Sanyo: PLC-WXU300  
Sanyo: PLC-WXU700

Sanyo: PLC-XC10  
Sanyo: PLC-XC50  
Sanyo: PLC-XC55  
Sanyo: PLC-XC56

Sanyo: PLC-XD2200  
Sanyo: PLC-XD2600

Sanyo: PLC-XE20  
Sanyo: PLC-XE31  
Sanyo: PLC-XE32  
Sanyo: PLC-XE40  
Sanyo: PLC-XE50

Sanyo: PLC-XF10  
Sanyo: PLC-XF12  
Sanyo: PLC-XF17  
Sanyo: PLC-XF20  
Sanyo: PLC-XF30  
Sanyo: PLC-XF31  
Sanyo: PLC-XF35  
Sanyo: PLC-XF40  
Sanyo: PLC-XF41  
Sanyo: PLC-XF45  
Sanyo: PLC-XF46  
Sanyo: PLC-XF47  
Sanyo: PLC-XF60  
Sanyo: PLC-XF70  
Sanyo: PLC-XF71  
Sanyo: PLC-XF1000

Sanyo: PLC-XK2200  
Sanyo: PLC-XK2600  
Sanyo: PLC-XK3010  
Sanyo: PLC-XL20  
Sanyo: PLC-XL40  
Sanyo: PLC-XL50  
Sanyo: PLC-XL51

Sanyo: PLC-XM100/L  
Sanyo: PLC-XM150/L

Sanyo: PLC-XP07

Sanyo: PLC-XP10  
Sanyo: PLC-XP17  
Sanyo: PLC-XP18  
Sanyo: PLC-XP20  
Sanyo: PLC-XP21  
Sanyo: PLC-XP30  
Sanyo: PLC-XP40  
Sanyo: PLC-XP41  
Sanyo: PLC-XP45  
Sanyo: PLC-XP46  
Sanyo: PLC-XP50  
Sanyo: PLC-XP51  
Sanyo: PLC-XP55  
Sanyo: PLC-XP56  
Sanyo: PLC-XP57  
Sanyo: PLC-XP100  
Sanyo: PLC-XP200

Sanyo: PLC-XR70

Sanyo: PLC-XT10  
Sanyo: PLC-XT11  
Sanyo: PLC-XT15  
Sanyo: PLC-XT16  
Sanyo: PLC-XT20  
Sanyo: PLC-XT21  
Sanyo: PLC-XT25  
Sanyo: PLC-XT35

Sanyo: PLC-XTC50

Sanyo: PLC-XU07  
Sanyo: PLC-XU10  
Sanyo: PLC-XU20  
Sanyo: PLC-XU21  
Sanyo: PLC-XU22  
Sanyo: PLC-XU25  
Sanyo: PLC-XU30  
Sanyo: PLC-XU31  
Sanyo: PLC-XU32  
Sanyo: PLC-XU33  
Sanyo: PLC-XU35  
Sanyo: PLC-XU36  
Sanyo: PLC-XU37  
Sanyo: PLC-XU38  
Sanyo: PLC-XU40  
Sanyo: PLC-XU41  
Sanyo: PLC-XU45  
Sanyo: PLC-XU46  
Sanyo: PLC-XU47  
Sanyo: PLC-XU48  
Sanyo: PLC-XU50  
Sanyo: PLC-XU51  
Sanyo: PLC-XU55  
Sanyo: PLC-XU56  
Sanyo: PLC-XU58  
Sanyo: PLC-XU60  
Sanyo: PLC-XU70  
Sanyo: PLC-XU73

Sanyo: PLC-XU74  
Sanyo: PLC-XU75  
Sanyo: PLC-XU78  
Sanyo: PLC-XU83  
Sanyo: PLC-XU84  
Sanyo: PLC-XU86  
Sanyo: PLC-XU86 Alt channel set  
Sanyo: PLC-XU87  
Sanyo: PLC-XU88  
Sanyo: PLC-XU88 Alt chan. set  
Sanyo: PLC-XU100  
Sanyo: PLC-XU101  
Sanyo: PLC-XU105  
Sanyo: PLC-XU106  
Sanyo: PLC-XU110  
Sanyo: PLC-XU110 Alt chan. set  
Sanyo: PLC-XU111  
Sanyo: PLC-XU111 Alt chan. set  
Sanyo: PLC-XU115  
Sanyo: PLC-XU115 Alt chan. set  
Sanyo: PLC-XU116  
Sanyo: PLC-XU300  
Sanyo: PLC-XU305

Sanyo: PLC-XU355  
Sanyo: PLC-XU4000  
  
Sanyo: PLC-XW10  
Sanyo: PLC-XW15  
Sanyo: PLC-XW20  
Sanyo: PLC-XW50  
Sanyo: PLC-XW55  
Sanyo: PLC-XW56  
Sanyo: PLC-XW57  
Sanyo: PLC-XW60  
Sanyo: PLC-XW65  
  
Sanyo: PLC-XW200  
Sanyo: PLC-XW250  
Sanyo: PLC-XW300  
  
Sanyo: PLC-ZM5000  
  
Sanyo: PLV-1  
Sanyo: PLV-20  
Sanyo: PLV-30  
Sanyo: PLV-60

Sanyo: PLV-70  
Sanyo: PLV-75  
Sanyo: PLV-80  
  
Sanyo: PLV-1080HD  
  
Sanyo: PLV-HD10  
Sanyo: PLV-HD100  
Sanyo: PLV-HD150  
Sanyo: PLV-HD2000  
Sanyo: PLV-WF10  
Sanyo: PLV-WF20  
  
Sanyo: PLV-Z1  
Sanyo: PLV-Z2  
Sanyo: PLV-Z3  
Sanyo: PLV-Z4  
Sanyo: PLV-Z5  
Sanyo: PLV-Z700  
Sanyo: PLV-Z2000  
Sanyo: PLV-Z3000  
Sanyo: PLV-Z4000

---

Sharp: LCD LC-M3700  
Sharp: LCD LC-M3710  
Sharp: LCD Generic PN1  
Sharp: LCD Generic PN2

These cover INPS command  
LCDs, ie:  
PN-325 / PN-425  
PN-465U / PN-G655E  
PN-E521 / PN-E601  
PN-E421 / PN-E471

PN-S525

Sharp: LCD Generic 3  
This covers IAVD command  
LCDs

Sharp: LCD Generic 4 LE series  
(0->60) and Generic 5 (0->100)

---

Generic 7 at 38400  
This covers new format  
commands:  
Sharp: LC-32LE360X  
Sharp: LC-40LE360X  
Sharp: LC-40LE530X  
Sharp: LC-40LE700X  
Sharp: LC-40LE830X  
Sharp: LC-40LE835X

Sharp: LC-46LE530X  
Sharp: LC-46LE830X  
Sharp: LC-46LE835X  
Sharp: LC-46LE840X

Sharp: LC-52LE830X  
Sharp: LC-52LE835X  
Sharp: LC-52LE840X

Sharp: LC-60LE630X  
Sharp: LC-60LE632U/X  
Sharp: LC-60LE835X

---

Sharp: LC-60LE650X  
Sharp: LC-60LE940X

Sharp: LC-70LE632U  
Sharp: LC-70LE650x  
Sharp: LC-70LE732U  
Sharp: LC-70LE735X

Sharp: LC-80LE940X

Sharp: LC-90LE740X

Sharp Generic 7 at 38400 baud:  
Sharp: PN-60TA3  
Sharp: PN-70TA3  
Sharp: PN-70TB3  
Sharp: PN-70TB3  
Sharp: PN-80TC3

---

Sharp: DT-400  
Sharp: DT-5000

Sharp: PG-A10  
Sharp: PG-A20

Sharp: PG-B10

Sharp: PG-C20  
Sharp: PG-C30  
Sharp: PG-C40  
Sharp: PG-C45

Sharp: PG-D100

---

Sharp: PG-D120  
Sharp: PG-D210  
Sharp: PG-D2500X  
Sharp: PG-D2510X  
Sharp: PG-D2700X  
Sharp: PG-D2710X  
Sharp: PG-D2870W  
Sharp: PG-D3010X  
Sharp: PG-D3050W  
Sharp: PG-D3510X  
Sharp: PG-D3550W  
Sharp: PG-D3750X/W  
Sharp: PG-D4010X/W  
Sharp: PG-D40W3D

---

Sharp: PG-D45X3D  
Sharp: PG-D50X3D

Sharp: PG-F212X  
Sharp: PG-F262X  
Sharp: PG-F255W  
Sharp: PG-F267X/W  
Sharp: PG-F312X  
Sharp: PG-F317X  
Sharp: PG-F325W

Sharp: PG-M15

Sharp: PG-MB60

Sharp: XG-C40	Sharp: XG-F315X	Sharp: XG-PH50X
Sharp: XG-C50	Sharp: XG-F317X	Sharp: XG-PH70X
Sharp: XG-C55	Sharp: XG-F320X	
Sharp: XG-C58	Sharp: XG-MB50	Sharp: XG-V10
Sharp: XG-C60	Sharp: XG-MB55	Sharp: XR-10
Sharp: XG-C68	Sharp: XG-MB56	Sharp: XR-11
Sharp: XG-C330	Sharp: XG-MB65	Sharp: XR-20
Sharp: XG-C335	Sharp: XG-MB66	Sharp: XR-30S/X
Sharp: XG-C355W	Sharp: XG-MB67	Sharp: XR-32S/X/L
Sharp: XG-C430	Sharp: XG-MB70	Sharp: XR-40X
Sharp: XG-C435		Sharp: XR-50S
Sharp: XG-C455W	Sharp: XG-NV1	Sharp: XR-55X
Sharp: XG-C465	Sharp: XG-NV2	Sharp: XV-Z10
	Sharp: XG-NV3	Sharp: XV-Z90
Sharp: XG-E1100	Sharp: XG-NV4	Sharp: XV-Z91
Sharp: XG-E1200	Sharp: XG-NV5	Sharp: XV-Z100
Sharp: XG-E3000	Sharp: XG-NV6	Sharp: ZV-Z2000
Sharp: XG-E3500	Sharp: XG-NV7	Sharp: ZV-Z3000
		Sharp: ZV-Z3100
Sharp: XG-F210X	Sharp: XG-P10	Sharp: ZV-Z10000
Sharp: XG-F211X	Sharp: XG-P20	Sharp: ZV-Z12000
	Sharp: XG-P25	Sharp: ZV-Z15000
Sharp: XG-F260X	Sharp: XG-P560W/N	Sharp: ZV-Z18000
Sharp: XG-F261X	Sharp: XG-P610X/N	Sharp: ZV-Z20000
Sharp: XG-F310X		Sharp: ZV-Z21000
<hr/>		
Sherwood_LCD1		
<hr/>		
Smart LCD: SBID8055i		
Smart LCD: SBID8070i		
<hr/>		
Smart series 2000	Smart: UNIFI UF55w	Smart: UNIFI UX60
Smart: SLR40WI	Smart: UF75	Smart: SLR40WI
<hr/>		
Sony LCD: FWD-32/40LX1/R	Sony LCD: GXD-L52/65H1	CX52x/400 series
Sony LCD: FWD-32/40LX2x		LCD: KLHW26/32
Sony LCD: FWD-42PV1/A/P	Sony KDL BRAVIA FY11	Sony ADCP alpha LCD
Sony LCD: FWD-50PX2	HX92x/82x/72x series	
Sony LCD: FWD-S42/47H1	NX72x series	
Sony LCD: FWD-S42E1	EX72x/62x/52x/46x/42x/32x	
<hr/>		
<b>(Use Generic 1 for unlisted, VPL-CH series, VPL-EX and EW series, VPL-S200, S500 and S600 series)</b> (VPL-D100 series has no RS232)	Sony: VPL-CX 63	Sony: VPL-CX275
	Sony: VPL-CX80	Sony: VPL-CX278
	Sony: VPL-CX85	
	Sony: VPL-CX86	Sony: VPL-ES3*
	Sony: VPL-CX100	Sony: VPL-ES4*
	Sony: VPL-CX120	*No parity
Sony: VPL-BW5	Sony: VPL-CX125	
	Sony: VPL-CX130	Sony: VPL-EW5
Sony: VPL-CW125	Sony: VPL-CX131	Sony: VPL-EW7
Sony: VPL-CW235	Sony: VPL-CX135	Sony: VPL-EW130
Sony: VPL-CW238	Sony: VPL-CX150	Sony: VPL-EW225
Sony: VPL-CW255	Sony: VPL-CX155	Sony: VPL-EW226
Sony: VPL-CW275	Sony: VPL-CX160	Sony: VPL-EW245
Sony: VPL-CW278	Sony: VPL-CX161	Sony: VPL-EW246
	Sony: VPL-CX165	Sony: VPL-EW275
Sony: VPL-CX61	Sony: VPL-CX235	Sony: VPL-EW276
	Sony: VPL-CX238	

Sony: VPL-EX3  
Sony: VPL-EX4  
Sony: VPL-EX5/U  
Sony: VPL-EX7  
Sony: VPL-EX50  
Sony: VPL-EX70  
Sony: VPL-EX71N  
Sony: VPL-EX100  
Sony: VPL-EX101  
Sony: VPL-EX120  
Sony: VPL-EX121  
Sony: VPL-EX123  
Sony: VPL-EX130  
Sony: VPL-EX130  
Sony: VPL-EX145  
Sony: VPL-EX146  
Sony: VPL-EX147  
Sony: VPL-EX148  
Sony: VPL-EX175  
Sony: VPL-EX176  
Sony: VPL-EX178  
Sony: VPL-EX221  
Sony: VPL-EX222  
Sony: VPL-EX225  
Sony: VPL-EX226  
Sony: VPL-EX241  
Sony: VPL-EX242  
Sony: VPL-EX245  
Sony: VPL-EX246  
Sony: VPL-EX271  
Sony: VPL-EX272  
Sony: VPL-EX273  
Sony: VPL-EX274  
Sony: VPL-EX275  
Sony: VPL-EX276  
  
Sony: VPL-F400H/X

---

## 2-Touch LCD

---

TAXAN KAGA PS-232X  
TAXAN KAGA PV-131S/X

---

TEAC PLASMA  
PLMSDM1060

Toshiba: TDP-D1  
Toshiba: TDP-D2  
Toshiba: TDP-EX20  
Toshiba: TDP-EW25  
Toshiba: TDP-MT200  
Toshiba: TDP-MT400  
Toshiba: TDP-S3  
Toshiba: TDP-S8  
Toshiba: TDP-S10  
Toshiba: TDP-S20  
Toshiba: TDP-ST20  
Toshiba: TDP-SW20  
Toshiba: TDP-S25  
Toshiba: TDP-SC25  
Toshiba: TDP-SW25  
Toshiba: TDP-S35  
Toshiba: TDP-SC35  
Toshiba: TDP-SW35

Sony: VPL-F401H  
Sony: VPL-F420HZ  
Sony: VPL-F720HZ  
Sony: VPL-F500H/X  
Sony: VPL-F501H  
Sony: VPL-F600X  
Sony: VPL-F700HL/XL  
  
Sony: VPL-FE40  
  
Sony: VPL-FH30  
Sony: VPL-FH31  
Sony: VPL-FH35  
Sony: VPL-FH36  
Sony: VPL-FH300L  
Sony: VPL-FH500L  
  
Sony: VPL-FHZ55  
Sony: VPL-FHZ700  
  
Sony: VPL-FW41/L  
Sony: VPL-FW300L  
  
Sony: VPL-FX30  
Sony: VPL-FX35  
Sony: VPL-FX37  
Sony: VPL-FX40  
Sony: VPL-FX41/L  
Sony: VPL-FX50  
Sony: VPL-FX51  
Sony: VPL-FX52  
Sony: VPL-PX11  
Sony: VPL-FX15  
Sony: VPL-FX35  
Sony: VPL-FX40  
Sony: VPL-FX41

## CTOUCH LCD

---

PLMHDM1065  
PLMHDM1275

Toshiba: TDP-S21  
Toshiba: TDP-SC21  
Toshiba: TDP-T3  
Toshiba: TDP-T8  
Toshiba: TDP-T9  
Toshiba: TDP-T30  
Toshiba: TDP-T40  
Toshiba: TDP-T45  
Toshiba: TDP-T60  
Toshiba: TDP-T61  
Toshiba: TDP-T70  
Toshiba: TDP-T71  
Toshiba: TDP-T80  
Toshiba: TDP-T90  
Toshiba: TDP-TW90  
Toshiba: TDP-T91  
Toshiba: TDP-T95  
Toshiba: TDP-TW95

Sony: VPL-FX50  
Sony: VPL-FX51  
Sony: VPL-FX52  
Sony: VPL-FX500L  
  
Sony: VPL-HW15  
Sony: VPL-HW30  
Sony: VPL-HW50  
  
Sony: VPL-PX11  
Sony: VPL-PX15  
Sony: VPL-PX35  
Sony: VPL-PX40  
Sony: VPL-PX41  
  
Sony: VPL-SW125  
Sony: VPL-SW525/C  
Sony: VPL-SW526/C  
Sony: VPL-SW535/C  
Sony: VPL-SW536/C  
  
Sony: VPL-SX125  
Sony: VPL-SX525  
Sony: VPL-SX535  
Sony: VPL-SX536  
  
Sony: VPL-TX7  
Sony: VPL-TX70  
  
Sony: VPL-VW70  
Sony: VPL-VW85  
Sony: VPL-VW95  
Sony: VPL-VW200  
Sony: VPL-VW1000

Toshiba: TDP-T98  
Toshiba: TDP-T99  
Toshiba: TDP-TW99  
Toshiba: TDP-T100  
Toshiba: TDP-TW100  
Toshiba: TDP-T250  
Toshiba: TDP-TW250  
Toshiba: TDP-TW300  
Toshiba: TDP-T350  
Toshiba: TDP-TW350  
Toshiba: TDP-T355  
Toshiba: TDP-TW355

---

Toshiba: TLP-250  
Toshiba: TLP-251  
Toshiba: TLP-260

Toshiba: TLP-261  
Toshiba: TLP-380  
Toshiba: TLP-381  
Toshiba: TLP-450  
Toshiba: TLP-451  
Toshiba: TLP-470  
Toshiba: TLP-471  
Toshiba: TLP-550  
Toshiba: TLP-551  
Toshiba: TLP-560  
Toshiba: TLP-561  
Toshiba: TLP-650  
Toshiba: TLP-651  
Toshiba: TLP-670  
Toshiba: TLP-671  
Toshiba: TLP-680  
Toshiba: TLP-681  
Toshiba: TLP-710  
Toshiba: TLP-711  
Toshiba: TLP-780  
Toshiba: TLP-781  
Toshiba: TLP-790  
Toshiba: TLP-791  
Toshiba: TLP-B2  
Toshiba: TLP-MT7E

---

Toshiba: TLP-S30  
Toshiba: TLP-S40  
Toshiba: TLP-S41  
Toshiba: TLP-S70  
Toshiba: TLP-S71  
Toshiba: TLP-S80  
Toshiba: TLP-SW80  
Toshiba: TLP-S81  
Toshiba: TLP-S200  
Toshiba: TLP-S201  
Toshiba: TLP-S220  
Toshiba: TLP-S221  
Toshiba: TLP-T50  
Toshiba: TLP-T400  
Toshiba: TLP-T401  
Toshiba: TLP-T500  
Toshiba: TLP-T501  
Toshiba: TLP-T520  
Toshiba: TLP-T521  
Toshiba: TLP-T600  
Toshiba: TLP-T601  
Toshiba: TLP-T620  
Toshiba: TLP-T621  
Toshiba: TLP-T700  
Toshiba: TLP-T701

---

Toshiba: TLP-T720  
Toshiba: TLP-T721  
Toshiba: TLP-WX2200  
Toshiba: TLP-X10U  
Toshiba: TLP-X11U  
Toshiba: TLP-X20U  
Toshiba: TLP-X21U  
Toshiba: X100  
Toshiba: X150  
Toshiba: X200  
Toshiba: TLP-X2000  
Toshiba: TLP-XC2000  
Toshiba: TLP-XD2000  
Toshiba: TLP-X2500  
Toshiba: TLP-XC2500  
Toshiba: TLP-X3000  
Toshiba: TLP-XC3000  
Toshiba: TLP-WX100  
Toshiba: TLP-WX200

Toshiba: SP1 \*\*  
Toshiba: XP1 \*\*  
Toshiba: XP2 \*\*  
\*\* Test version in release, not  
cleared for reliability issues.

---

Viewsonic: PJ750  
Viewsonic: PJ853  
Viewsonic: PJD5123  
Viewsonic: PJD5223  
Viewsonic: PJD5232  
Viewsonic: PJD5234  
Viewsonic: PJD5345  
Viewsonic: PJD5353  
Viewsonic: PJD6210  
Viewsonic: PJD6211  
Viewsonic: PJD6212  
Viewsonic: PLD6220  
Viewsonic: PLD6221  
Viewsonic: PJD6230

---

Viewsonic: PJD6240  
Viewsonic: PJD6241  
Viewsonic: PJD6243  
Viewsonic: PJD6251  
Viewsonic: PJD6531w  
Viewsonic: PJD6544w  
Viewsonic: PJD6381  
Viewsonic: PJD7223  
Viewsonic: PJD7333  
Viewsonic: PJD7533w  
Viewsonic: PJD8333s  
Viewsonic: PJD8633ws

Viewsonic: PJD3211

---

Viewsonic: PJD9371

Viewsonic: Pro8100  
Viewsonic: Pro8200  
Viewsonic: Pro8300  
Viewsonic: Pro8400  
Viewsonic: Pro8450w  
Viewsonic: Pro8500  
Viewsonic: Pro8600  
Viewsonic: Pro9500

---

**Note: Vivitek have some projectors which respond to multiple code sets.**

**Very confusing.**

**Vivitek: Generic 1, 2 (9600) (~SR etc group)**

D925TX  
D927TX  
D930TX  
D935VX  
D940VX  
D945VX  
D950HD  
D952HD  
D963HD  
H1080  
H1085

**Vivitek: Generic 3 (9600) (~S1 etc group)**

D5500  
D6010  
D6510

**Vivitek: Generic 4 (9600) (VXXS0001 etc group)**

D54HA, D55BA, D86, D87,  
D501ZAA, D501ZAA,  
D501ZWAA, D516, D517, D518,  
D519, D548, D550, D551, D552,  
D553, D554, D555, D556, D557,  
D557W, D557WH, D560ST,  
D751ST, D755WT/i, D791ST,  
D795WT,

D837, D850, D851, D853W,  
D855ST, D856, D857WT, D858,  
D859, D860, D861, D862, D863,  
D864, D865W, D867, D869,  
D871ST, D873ST,

D910HD, D912HD, D965,  
D966HD, D967, D968U,

D5005, D5010, D5110W,  
D5180HD, D5185HD, D5010,  
D5190HD, D5280U, D5290U,  
D5380U,

D7080HD, D7180, H1180HD,

H1185HD (also Digital  
Projection)



**Vivitek Generic 5: “op series”**

**9600 baud:** DP9655NUHA,  
DP9655NDPHA, DU6871,  
DW6851, DX6831, DU9000

---

(Not covered: D8300/EST/LT/ST  
D8010W  
D8800

---

D8900)

---

(Remote terminal for 2 connected  
T460s)

\* **No parallel** means that “Reply”  
mode must be used with these  
projectors, and so only **one**  
projector can be connected to one  
or two T460s.